


GUTTER CHECKS

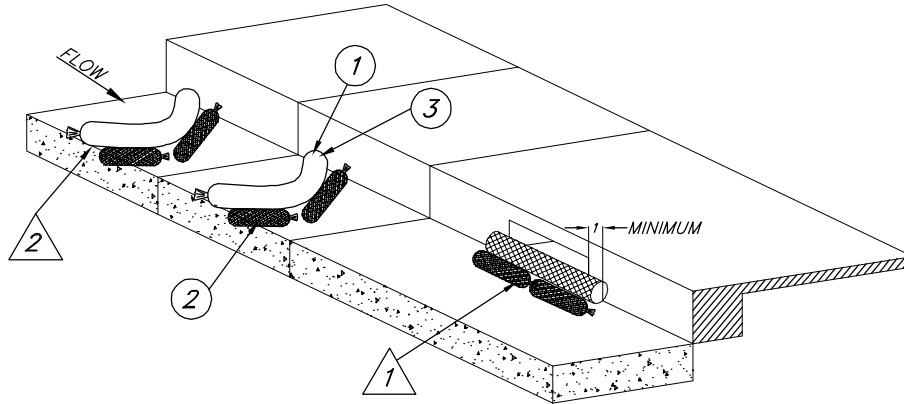

MATERIAL LIST

QTY	DESCRIPTION	STOCK NO.	QTY	DESCRIPTION	STOCK NO.
1	GUTTER BUDDY 9"	02505721			
2	SAND BAG	02505723			
3	SILT SOCK 9"	02505689			

GENERAL NOTES

- 1 SEE ES-620 FOR CURB INLET PROTECTION.
- 2 INSTALL GUTTER CHECKS USING GUTTER BUDDY OR SILT SOCK AND SAND BAGS UPSTREAM OF INLETS TO ALLOW ADDITIONAL AREAS FOR SEDIMENT TO BE DEPOSITED PRIOR TO REACHING INLETS. THIS SHOULD BE DONE FOR FLOWS WITH HIGH SEDIMENT LOADING SUCH AS MAIN BREAKS AND TRENCH DEWATERING. DO NOT INSTALL INTO TRAFFIC LANES WHERE LANES ARE OPEN TO VEHICLES.
- 3 SAND BAGS OR COARSE GRANULAR MATERIAL MAY ALSO BE USED IN A U-SHAPE FOR GUTTER CHECKS.

**CONSTRUCTION STANDARD
CITY UTILITIES OF
SPRINGFIELD, MISSOURI**

**INSTALLATION OF
GUTTER CHECKS FOR
SEDIMENT CONTROL**

LATEST REV. DATE 03/14/2013	STANDARD NO. ES-630	PAGE:
---------------------------------------	-------------------------------	-----------